

Lehnenverlängerung Back Rest Extension

#22935

Die Lehnenverlängerung vergrößert die Auflagefläche der Rückenlehne.

Diese Zusatzoption bietet Ihnen mehr Platz und Komfort, sowohl auf dem Kettwiesel als auch auf dem Lepus und dem Pino.

Montage


1. Lösen Sie den Klettverschluss am oberen Sitzende und entfernen Sie die Kunststoffkappen aus den Sitzholmen.
2. Legen Sie das Einlegepapier (2) um die Adapterhülsen (1) und schieben Sie beides in die Sitzholme.



Hinweis:

Bei Pino Sitzen muss das Einlegepapier dreilagig verwendet werden, um an den größeren Rohr-Innendurchmesser angepasst zu werden. Bei Kettwiesel Sitzen bis Mitte 2014 muss das Einlegepapier zweilagig verwendet werden.

3. Schieben Sie die Sitzverlängerungsklemmen (3) ca. 4 cm in die Adapterhülsen, so dass die Gurtbreite übersteht. Klemmen Sie die Sitzverlängerung im Sitz, indem Sie die Schrauben festziehen.
4. Legen Sie das Gurtband (4) um die Lehnenverlängerung und spannen Sie den Stoff von hinten mit dem beiliegenden Riemen (5).
5. Befestigen Sie den Klettverschluss des Sitzbezuges auf dem Gurtband.

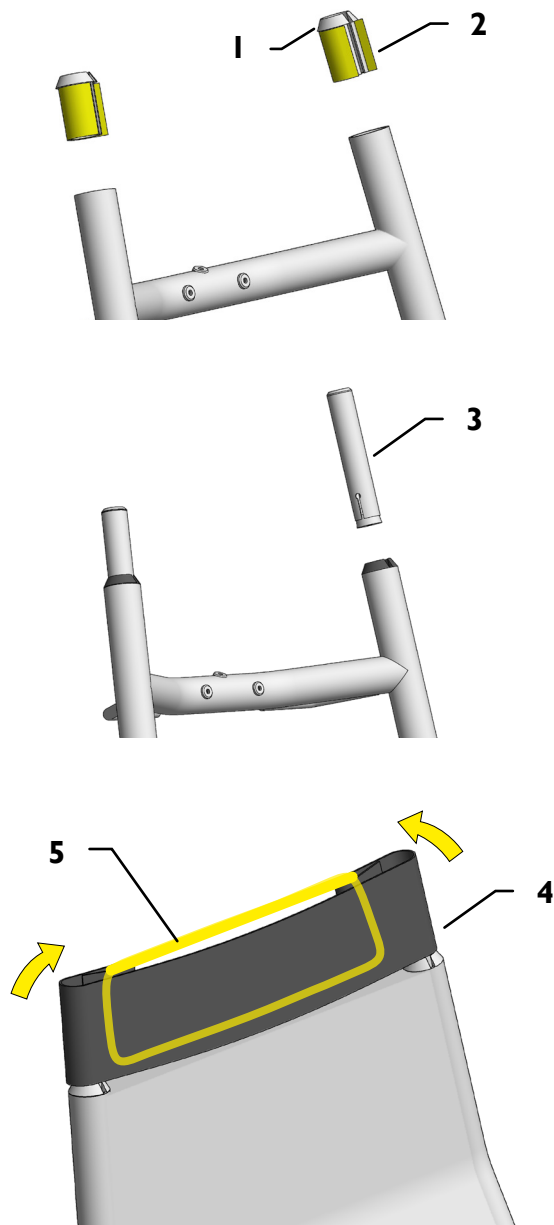

The Back Rest Extension increases the contact surface of the back rest.

This additional option offers you more space and comfort and is available for the Kettwiesel, Lepus, and Pino.

Installation instructions

1. Open the Velcro fastener at the upper end of the seat and remove the plastic caps from the ends of the seat tubes.
2. Place the tape (2) around the adapter sleeves (1) and slide both into the ends of the seat tubes.



Note:

For Pino seats, the tape must be used in three layers in order to adapt to the larger inside diameter of the seat tubes. For Kettwiesel seats up to mid-2014, the tape must be used in two layers.

3. Insert the seat extension clamps (3) approx. 4 cm (1½") into the adapter sleeves. so that the belt width protrudes. Clamp the seat extension in the seat by tightening the screws.
4. Wrap the strip of webbing (4) around the backrest extension and tension the fabric from behind using the supplied strap (5).
5. Attach the Velcro fastener of the seat cover to the strip of webbing.

Nummer	Beschreibung	Art.-Nr.	Menge
1	Adapterhülse XXL	23049	2
2	Einlegepapier Synflex 50/0,45	20146	6
3	Sitzverlängerungsklemme	20904/21133/21238	2
4	Gurtband Sitzverlängerung	20945	1
5	Spannriemen	21500	1

Number	Description	Art.No.	Quantity
1	XXL adapter sleeve	23049	2
2	Grip tape Synflex 50/0,45	20146	6
3	Seat extension clamp	20904/21133/21238	2
4	Strip of webbing for seat extension	20945	1
5	Tensioning strap	21500	1